

inmotion
A I R B A G



PROCEDURE AIRBAG DEMO




Step 1 : How to install In&Box demo app on Android ?

1) Download **Airbag Demo app**, using the search tab of Google Play.

Or following the link : <https://play.google.com/apps/testing/com.inemotion.demo>

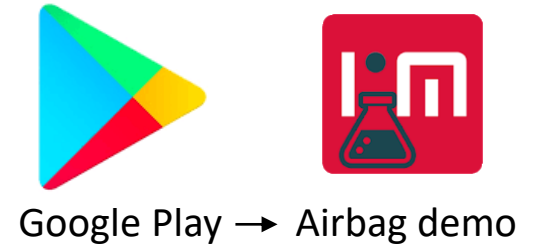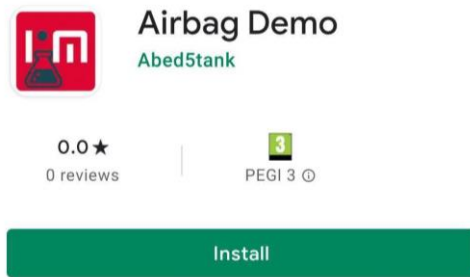


2) Make sure your phone is **bluetooth ready**

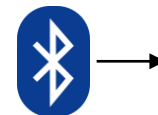

1. Tap on Settings - Select "General"
2. Tap on "Bluetooth" and Flip the On/Off button

3) Join the **In&Box demo beta app** by clicking on the icon.

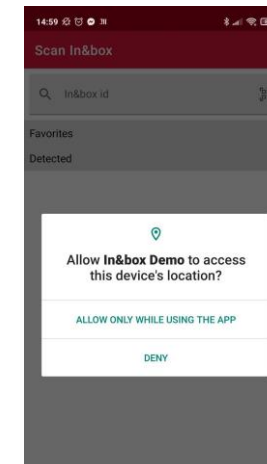

Allow **In&box Demo** to access this device's location?

ALLOW ONLY WHILE USING THE APP

DENY





4) Clic on « Allow only while using the app ».

Step 2 : How to connect my In&Box to my phone ?

- 1) Switch on your In&box demo, select **QRCODE** on the bottom right of your screen..
- 2) Allow In&box demo to take pictures and **scan the QR code** on the back of your

In&box.

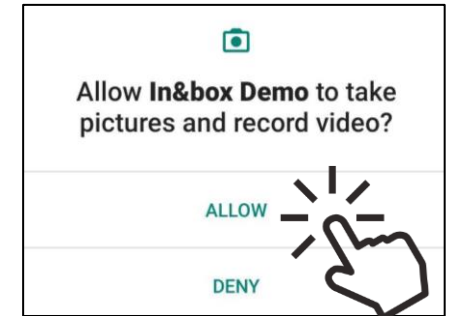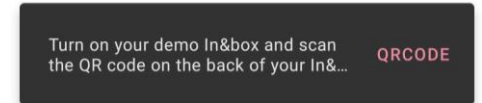

- 1) You're In&box should be **"detected"**

Select it and **register your name**.



- 4) Clic ok.

The In&box is now registered and functional.



*Several users can be connected to the same In&Box, but not in the same time.
Tips : Give her a specific name and write it down, directly on the In&Box.*

Step 3 : How do you do a demo ?


1) **1) Insert the In&Box** in the housing, **ready to be use**. Cannister placed.

2) Back to your phone, **select the paired In&box**.

If you're In&Box is well locked, a green sign should appear as status : ✓



3) Make sure **the airbag vest is on your test person and fully zipped up**.

Please inflate the airbag vest under a compatible motorcycle jacket and with a helmet, to show the protection zones covered by the airbag.

 *Important : please make sure the jacket is compatible.*

4) Follow the prompts at the bottom of the screen.

Slide and hit “inflate”.

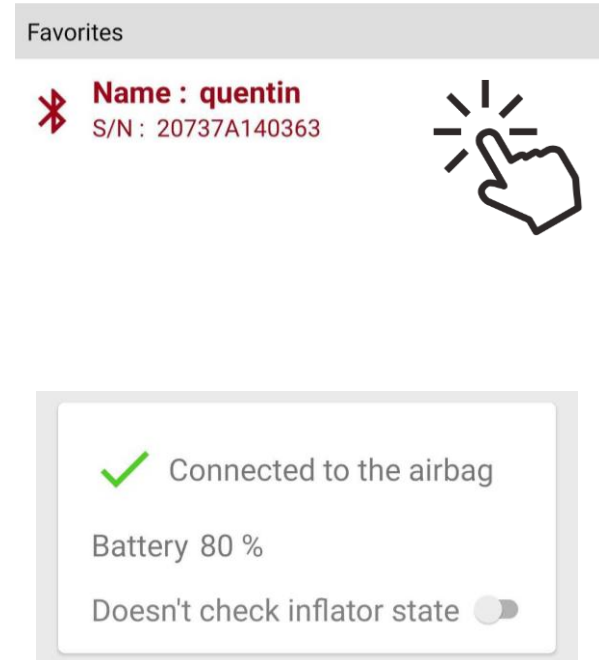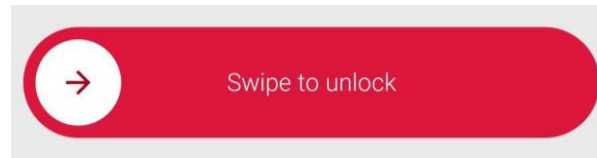

Step 4 : And after a safe deployment ?



1) Once the airbag is inflated, please make sure to **replace the empty inflator by a new one.**

After safe deployment and you're ready to set the vest up for the next deployment, remove the in&box from the housing. The power should already be tripped to the off position. If it is not off, turn it off. Plug it in to charge if necessary - For more informations, please follow use directions or refer to our Youtube tutorials:

<https://www.youtube.com/channel/in&motion>

2) Unzip the back panel on the vest and carefully **remove the deployed demo argon canister.**

The wiring should already be removed from the deployed canister. If not, carefully remove the wiring by pinching the black plastic tabs on the wiring housing.

3) **Insert a fresh demo canister** : Insert the wiring in the bottom of the canister and push the canister back into the plastic housing, then zip up the back zipper and stow airbag vest carefully.

Do not put the In&Box back in the airbag until you are ready for your next deployment.





 [In&motion](https://www.facebook.com/In&motion)

 [In&motion](https://www.youtube.com/In&motion)

 [@inandmotion](https://www.instagram.com/@inandmotion)

 [@inandmotion](https://www.twitter.com/@inandmotion)

QUENTIN FORGE
TRADE MARKETING
quentin.forge@inemotion.com
+33 6 07 63 41 76